

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
HP Q2612A (12A)	500	HP LaserJet 1010, 1012, 1015, 1018, 1020, 1022, 3015, 3020, 3030, 3050, 3052, 3055, M1005, M1319	
HP CE285A (85A)	500	HP LaserJet P1102, M1132, M1212, M1214, M1217	
HP CF283A (83A)	500	HP LaserJet Pro M125a, M125r, M125ra, M125rnw, M127fn, M127fw, Pro M201dw, M201n, M225dn, M225dw, M225rdn	
HP CE505A (05A)	500	HP LaserJet P2035, P2055	
HP CE505X (05X)	800	HP LaserJet P2055	
HP CF280A (80A)	500	HP LaserJet Pro 400 M401, M425	
HP CF280X (80X)	800	HP LaserJet Pro 400 M401, M425	
HP CB435A (35A)	500	HP LaserJet P1005, P1006	
HP CB436A (36A)	500	HP LaserJet P1505, M1120, M1522	
HP CE278A (78A)	500	HP LaserJet P1566, P1606, M1536	
HP Q5949A (49A)	500	HP LaserJet 1320, 1160, 3390, 3392	
HP Q5949X (49X)	800	HP LaserJet 1320, 3390, 3392	

Монохромные			
HP 92274A (74A)	500	HP LaserJet 4L, 4P, 4ML, 4MP	
HP 92298A (98A)	600	HP LaserJet 4, 4+, 4M, 4M+, 5, 5M	
HP C3903A (03A)	500	HP LaserJet 5P, 6P, 5MP, 6MP	
HP C3906A (06A)	500	HP LaserJet 5L, 6L, 3100, 3150	
HP C3909A (09A)	1200	HP LaserJet 5SI, 8000, Mopier 240	
HP C4092A (92A)	500	HP LaserJet 1100, 3200, 3220	
HP C4096A (96A)	600	HP LaserJet 2100, 2200	
HP C4127A (27A)	800	HP LaserJet 4000, 4050	
HP C4127X (27X)	800	HP LaserJet 4000, 4050	
HP C4129X (29X)	1200	HP LaserJet 5000, 5100	
HP C4182X (82X)	1200	HP LaserJet 8100, 8150, Mopier 320	
HP C7115A (15A)	500	HP LaserJet 1000, 1005, 1200, 1220, 3300, 3320, 3330, 3380	
HP C7115X (15X)	600	HP LaserJet 1000, 1005, 1200, 1220, 3300, 3320, 3330, 3380	
HP C8061A (61A)	900	HP LaserJet 4100	
HP C8061X (61X)	900	HP LaserJet 4100	
HP CB435A (35A)	500	HP LaserJet P1005, P1006	
HP CB436A (36A)	500	HP LaserJet P1505, M1120, M1522	
HP CC364A (64A)	900	HP LaserJet P4014, P4015, P4515	
HP CC364X (64X)	1400	HP LaserJet P4014, P4015, P4515	
HP CE255A (55A)	600	HP LaserJet P3015, Pro M521, Enterprise 500 M525	
HP CE255X (55X)	900	HP LaserJet P3015, Pro M521, Enterprise 500 M525	
HP CE278A (78A)	500	HP LaserJet P1566, P1606, M1536	
HP CE285A (85A)	500	HP LaserJet P1102, M1132, M1212, M1214, M1217	
HP CE505A (05A)	500	HP LaserJet P2035, P2055	
HP CE505X (05X)	800	HP LaserJet P2055	
HP CE390A (90A)	1100	HP LaserJet Enterprise 600 M601n, M601dn, M602n, M602dn, M602x, M603n, M603dn, M603xh, M4555, M4555f, M4555h, M4555fskm	
HP CE390X (90X)	1500	HP LaserJet Enterprise 600 M602n, M602dn, M602x, M603n, M603dn, M603xh, M4555, M4555f, M4555h, M4555fskm	
HP CF214A (14A)	1200	HP LaserJet Enterprise 700 M712, M725	чип
HP CF214X (14X)	1200	HP LaserJet Enterprise 700 M712, M725	чип
HP CF217A (17A)	500	HP LaserJet Pro M102, M102a, M102w, MFP M130, M130a, M130fw, M130nw	!

HP CF218A (18A)	500	HP LaserJet Pro M104, M104a, M104w, MFP M132, M132a, M132fn, M132fw, M132nw	!
HP CF226A (26A)	500	HP LaserJet Pro M402n, M402d, M402dn, M402dne, M402dw, M426dw, M426fdn, M426fdw	
HP CF226X (26X)	500	HP LaserJet Pro M402n, M402d, M402dn, M402dne, M402dw, M426dw, M426fdn, M426fdw	
HP CF228A (28A)	500	HP LaserJet Pro M403, M403n, M403d, M403dn, M403dw, M427, M427dw, M427fdn, M427fdw	
HP CF228X (28X)	500	HP LaserJet Pro M403, M403n, M403d, M403dn, M403dw, M427, M427dw, M427fdn, M427fdw	
HP CF230A (30A)	500	HP LaserJet Pro M203, M203dn, M203dw, M227, M227fdw, M227sdn, M227fdn	!
HP CF230X (30X)	500	HP LaserJet Pro M203, M203dn, M203dw, M227, M227fdw, M227sdn, M227fdn	!
HP CF231A (31A)	500	HP LaserJet Ultra M206dn, M230sdn, M230fdw	!
HP CF232A (32A) drum	-	HP LaserJet Pro M203, M203dn, M203dw, M227, M227fdw, M227sdn, M227fdn, Ultra M206dn, M230sdn, M230fdw	!
HP CF233A (33A)	500	HP LaserJet Ultra M106w, M134a, M134fn	!
HP CF234A (34A) drum	-	HP LaserJet Ultra M106w, M134a, M134fn	!
HP CF237A (37A)	1100	HP LaserJet Enterprise M607dn, M607n, M608dn, M608n, M608x, M609dn, M609x, M631dn, M631z, M631h, M632h, M632z, M632fht	
HP CF237X (37X)	1100	HP LaserJet Enterprise M608dn, M608n, M608x, M609dn, M609x, M631dn, M631z, M631h, M632h, M632z, M632fht	
HP CF237Y (37Y)	1100	HP LaserJet Enterprise M608dn, M608n, M608x, M609dn, M609x, M631dn, M631z, M631h, M632h, M632z, M632fht	
HP CF244A (44A)	500	HP LaserJet Pro M15w, M28a, M28w	
HP Q2613A (13A)	500	HP LaserJet 1300	
HP Q2613X (13X)	600	HP LaserJet 1300	
HP Q2624A (24A)	500	HP LaserJet 1150	
HP Q5942A (42A)	800	HP LaserJet 4250, 4350	
HP Q5942X (42X)	1200	HP LaserJet 4250, 4350	
HP Q5945A (45A)	900	HP LaserJet 4345, M4345	
HP Q5949A (49A)	500	HP LaserJet 1320, 1160, 3390, 3392	
HP Q5949X (49X)	600	HP LaserJet 1320, 3390, 3392	
HP Q6511A (11A)	800	HP LaserJet 2410, 2420, 2430	
HP Q6511X (11X)	1200	HP LaserJet 2410, 2420, 2430	
HP Q7516A (16A)	1200	HP LaserJet 5200	чип
HP Q7551A (51A)	600	HP LaserJet P3005, M3027, M3035	
HP Q7551X (51X)	600	HP LaserJet P3005, M3027, M3035	
HP Q7553A (53A)	500	HP LaserJet P2014, P2015, M2727	
HP Q7553X (53X)	500	HP LaserJet P2014, P2015, M2727	
HP Q7570A (70A)	1200	HP LaserJet M5025, M5035	чип

Цветные			
HP C9700A (121A) bk	1500	HP LaserJet 1500, 2500	чип
HP C9701A (121A) c	1500	HP LaserJet 1500, 2500	чип
HP C9702A (121A) y	1500	HP LaserJet 1500, 2500	чип
HP C9703A (121A) m	1500	HP LaserJet 1500, 2500	чип
HP C9730A (645A) bk	2500	HP LaserJet 5500, 5550	чип

HP C9731A (645A) c	2500	HP LaserJet 5500, 5550	чип
HP C9732A (645A) y	2500	HP LaserJet 5500, 5550	чип
HP C9733A (645A) m	2500	HP LaserJet 5500, 5550	чип
HP CB380A (823A) bk	2300	HP Color LaserJet CP6015, CP6015dn, CP6015de, CP6015x, CP6015xh	!
HP CB381A (824A) c	2300	HP Color LaserJet CP6015, CP6015dn, CP6015de, CP6015x, CP6015xh, CM6030 mfp, CM6040 mfp	!
HP CB382A (824A) y	2300	HP Color LaserJet CP6015, CP6015dn, CP6015de, CP6015x, CP6015xh, CM6030 mfp, CM6040 mfp	!
HP CB383A (824A) m	2300	HP Color LaserJet CP6015, CP6015dn, CP6015de, CP6015x, CP6015xh, CM6030 mfp, CM6040 mfp	!
HP CB540A (125A) bk	900	HP LaserJet CP1215, CP1515, CP1518, CM1312	чип
HP CB541A (125A) c	900	HP LaserJet CP1215, CP1515, CP1518, CM1312	чип
HP CB542A (125A) y	900	HP LaserJet CP1215, CP1515, CP1518, CM1312	чип
HP CB543A (125A) m	900	HP LaserJet CP1215, CP1515, CP1518, CM1312	чип
HP CC530A (304A) bk	900	HP LaserJet CP2025, CM2320	чип
HP CC531A (304A) c	900	HP LaserJet CP2025, CM2320	чип
HP CC532A (304A) y	900	HP LaserJet CP2025, CM2320	чип
HP CC533A (304A) m	900	HP LaserJet CP2025, CM2320	чип
HP CE250A (504A) bk	1900	HP LaserJet CP3525, CM3530	чип
HP CE251A (504A) c	1900	HP LaserJet CP3525, CM3530	чип
HP CE252A (504A) y	1900	HP LaserJet CP3525, CM3530	чип
HP CE253A (504A) m	1900	HP LaserJet CP3525, CM3530	чип
HP CE260A (647A) bk	1800	HP LaserJet CP4025, CP4025n, CP4025dn, CP4525, CP4525n, CP4525dn, CP4525xh, CM4540, CM4540f, CM4540fskm	!
HP CE261A (648A) c	1800	HP LaserJet CP4025, CP4025n, CP4025dn, CP4525, CP4525n, CP4525dn, CP4525xh	!
HP CE262A (648A) y	1800	HP LaserJet CP4025, CP4025n, CP4025dn, CP4525, CP4525n, CP4525dn, CP4525xh	!
HP CE263A (648A) m	1800	HP LaserJet CP4025, CP4025n, CP4025dn, CP4525, CP4525n, CP4525dn, CP4525xh	!
HP CE270A (650A) bk	2100	HP LaserJet CP5520, CP5525	чип
HP CE271A (650A) c	2100	HP LaserJet CP5520, CP5525	чип
HP CE272A (650A) y	2100	HP LaserJet CP5520, CP5525	чип
HP CE273A (650A) m	2100	HP LaserJet CP5520, CP5525	чип
HP CE310A (126A) bk	900	HP LaserJet CP1025, Pro 100 M175A	чип
HP CE311A (126A) c	900	HP LaserJet CP1025, Pro 100 M175A	чип
HP CE312A (126A) y	900	HP LaserJet CP1025, Pro 100 M175A	чип
HP CE313A (126A) m	900	HP LaserJet CP1025, Pro 100 M175A	чип
HP CE314A (126A) drum	500	HP LaserJet CP1025, Pro 100 M175A	чип
HP CE320A (128A) bk	900	HP LaserJet CP1525, CM1415	чип
HP CE321A (128A) c	900	HP LaserJet CP1525, CM1415	чип
HP CE322A (128A) y	900	HP LaserJet CP1525, CM1415	чип
HP CE323A (128A) m	900	HP LaserJet CP1525, CM1415	чип
HP CE340A (651A) bk	2300	HP LaserJet Enterprise 700 M775	чип
HP CE341A (651A) c	2300	HP LaserJet Enterprise 700 M775	чип
HP CE342A (651A) y	2300	HP LaserJet Enterprise 700 M775	чип
HP CE343A (651A) m	2300	HP LaserJet Enterprise 700 M775	чип
HP CE400A (507A) bk	1900	HP LaserJet Enterprise 500 M551, M570, M575	чип
HP CE400X (507X) bk	1900	HP LaserJet Enterprise 500 M551, M570, M575	чип
HP CE401A (507A) c	1900	HP LaserJet Enterprise 500 M551, M570, M575	чип
HP CE402A (507A) y	1900	HP LaserJet Enterprise 500 M551, M570, M575	чип
HP CE403A (507A) m	1900	HP LaserJet Enterprise 500 M551, M570, M575	чип
HP CE410A (305A) bk	900	HP LaserJet Pro 300 M351, M375, Pro 400 M451, M475	чип

HP CE411A (305A) c	900	HP LaserJet Pro 300 M351, M375, Pro 400 M451, M475	чип
HP CE412A (305A) y	900	HP LaserJet Pro 300 M351, M375, Pro 400 M451, M475	чип
HP CE413A (305A) m	900	HP LaserJet Pro 300 M351, M375, Pro 400 M451, M475	чип
HP CE740A (307A) bk	1800	HP LaserJet CP5225	чип
HP CE741A (307A) c	1800	HP LaserJet CP5225	чип
HP CE742A (307A) y	1800	HP LaserJet CP5225	чип
HP CE743A (307A) m	1800	HP LaserJet CP5225	чип
HP CF210A (131A) bk	900	HP LaserJet Pro 200 M251, MFP M276	чип
HP CF210X (131X) bk	900	HP LaserJet Pro 200 M251, MFP M276	чип
HP CF211A (131A) c	900	HP LaserJet Pro 200 M251, MFP M276	чип
HP CF212A (131A) y	900	HP LaserJet Pro 200 M251, MFP M276	чип
HP CF213A (131A) m	900	HP LaserJet Pro 200 M251, MFP M276	чип
HP CF320A (652A) bk	2100	HP Color LaserJet Enterprise M651, M680	чип
HP CF321A (653A) c	2100	HP Color LaserJet Enterprise M680	чип
HP CF322A (653A) y	2100	HP Color LaserJet Enterprise M680	чип
HP CF323A (653A) m	2100	HP Color LaserJet Enterprise M680	чип
HP CF350A (130A) bk	900	HP Color LaserJet Pro MFP M176n, M177fw	чип
HP CF351A (130A) c	900	HP Color LaserJet Pro MFP M176n, M177fw	чип
HP CF352A (130A) y	900	HP Color LaserJet Pro MFP M176n, M177fw	чип
HP CF353A (130A) m	900	HP Color LaserJet Pro MFP M176n, M177fw	чип
HP CF360A (508A) bk	1800	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF361A (508A) c	1800	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF362A (508A) y	1800	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF363A (508A) m	1800	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF360X (508X) bk	2200	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF361X (508X) c	2200	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF362X (508X) y	2200	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF363X (508X) m	2200	HP Color LaserJet Enterprise M552dn, M553dn, M553n, M553x, M577dn, M577f, M577c	чип
HP CF380A (312A) bk	900	HP LaserJet Pro M476dn, M476dw, M476nw	чип
HP CF380X (312X) bk	900	HP LaserJet Pro M476dn, M476dw, M476nw	чип
HP CF381A (312A) c	900	HP LaserJet Pro M476dn, M476dw, M476nw	чип
HP CF382A (312A) y	900	HP LaserJet Pro M476dn, M476dw, M476nw	чип
HP CF383A (312A) m	900	HP LaserJet Pro M476dn, M476dw, M476nw	чип
HP CF400A (201A) bk	1200	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип
HP CF401A (201A) c	1200	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип
HP CF402A (201A) y	1200	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип
HP CF403A (201A) m	1200	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип
HP CF400X (201X) bk	1500	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип
HP CF401X (201X) c	1500	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип
HP CF402X (201X) y	1500	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип

HP CF403X (201X) m	1500	HP Color LaserJet Pro M252n, M252dw, M274n, M277n, M277dw	чип
HP CF410A (410A) bk	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF411A (410A) c	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF412A (410A) y	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF413A (410A) m	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF410X (410X) bk	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF411X (410X) c	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF412X (410X) y	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF413X (410X) m	1500	HP LaserJet Pro M377dw, M452dn, M452nw, M477fdw, M477fdn, M477fnw	чип
HP CF530A (205A) bk	900	HP Color LaserJet Pro M180n, M181fw	!
HP CF531A (205A) c	900	HP Color LaserJet Pro M180n, M181fw	!
HP CF532A (205A) y	900	HP Color LaserJet Pro M180n, M181fw	!
HP CF533A (205A) m	900	HP Color LaserJet Pro M180n, M181fw	!
HP CF540A (203A) bk	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP CF541A (203A) c	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP CF542A (203A) y	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP CF543A (203A) m	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP CF540X (203X) bk	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP CF541X (203X) c	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP CF542X (203X) y	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP CF543X (203X) m	900	HP Color LaserJet Pro M254dw, M254nw, M280nw, M281fdn, M281fdw	!
HP Q2670A (308A) bk	1500	HP Color LaserJet 3500, 3550, 3700	чип
HP Q2671A (309A) c	1500	HP Color LaserJet 3500, 3550	чип
HP Q2672A (309A) y	1500	HP Color LaserJet 3500, 3550	чип
HP Q2673A (309A) m	1500	HP Color LaserJet 3500, 3550	чип
HP Q3960A (122A) bk	1400	HP LaserJet 2550, 2820, 2840	чип
HP Q3961A (122A) c	1400	HP LaserJet 2550, 2820, 2840	чип
HP Q3962A (122A) y	1400	HP LaserJet 2550, 2820, 2840	чип
HP Q3963A (122A) m	1400	HP LaserJet 2550, 2820, 2840	чип
HP Q3971A (123A) c	1400	HP LaserJet 2550, 2820, 2840	чип
HP Q3972A (123A) y	1400	HP LaserJet 2550, 2820, 2840	чип
HP Q3973A (123A) m	1400	HP LaserJet 2550, 2820, 2840	чип
HP Q6000A (124A) bk	1100	HP Color LaserJet 1600, 2600, 2605, CM1015, CM1017	чип
HP Q6001A (124A) c	1100	HP Color LaserJet 1600, 2600, 2605, CM1015, CM1017	чип
HP Q6002A (124A) y	1100	HP Color LaserJet 1600, 2600, 2605, CM1015, CM1017	чип
HP Q6003A (124A) m	1100	HP Color LaserJet 1600, 2600, 2605, CM1015, CM1017	чип
HP Q6470A (501A) bk	1800	HP LaserJet 3600, 3800, CP3505	чип
HP Q6471A (502A) c	1800	HP LaserJet 3600	чип

HP Q6472A (502A) y	1800	HP LaserJet 3600	чип
HP Q6473A (502A) m	1800	HP LaserJet 3600	чип
HP Q7581A (503A) c	1800	HP LaserJet 3800, CP3505	чип
HP Q7582A (503A) y	1800	HP LaserJet 3800, CP3505	чип
HP Q7583A (503A) m	1800	HP LaserJet 3800, CP3505	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Монохромные			
Canon 703	400	Canon LBP-2900, LBP-3000	
Canon 706	500	Canon MF6530, MF6540, MF6550, MF6560, MF6580, MF6560	
Canon 708	400	Canon LBP-3300, LBP-3360	
Canon 712	400	Canon LBP-3010	
Canon 713	400	Canon LBP-3250	
Canon 714	400	Canon FAX-L3000	
Canon 715	400	Canon LBP-3310, LBP-3370	
Canon 719	400	Canon LBP6300dn, LBP6310dn, LBP6630dn, LBP6650dn, LBP6670dn, LBP6680x, LBP251dw, LBP252dw, LBP253x, MF5840dn, MF5880dn, MF5940dn, MF5980dw, MF6140dn, MF6180dw, MF411DW, MF416DW, MF418x, MF419x	
Canon 719H	400	Canon LBP6300dn, LBP6310dn, LBP6630dn, LBP6650dn, LBP6670dn, LBP6680x, LBP251dw, LBP252dw, LBP253x, MF5840dn, MF5880dn, MF5940dn, MF5980dw, MF6140dn, MF6180dw, MF411DW, MF416DW, MF418x, MF419x	
Canon 720	400	Canon MF6680dn	
Canon 724	600	Canon LBP-6750, LBP-6780, MF512x, MF515x	
Canon 724H	900	Canon LBP-6750, LBP-6780, MF512x, MF515x	
Canon 725	400	Canon LBP-6000, LBP-6020, LBP-6030, MF3010	
Canon 726	400	Canon LBP-6200d, LBP-6230dw	
Canon 728	400	Canon MF4410, MF4430, MF4450, MF4550, MF4570, MF4580, MF4730, MF4750, MF4780w, MF4870dn, MF4890dw	
Canon 737	400	Canon MF211, MF212w, MF216n, MF217w, MF226dn, MF229dw, MF231, MF232w, MF237w, MF244dw, MF247dw, MF249dw, LBP151dw	
Canon EP-22	400	Canon LBP-1120, LBP-800, LBP-810, LBP-250, LBP-350, LBP-1110	
Canon EP-25	400	Canon LBP-1210	
Canon EP-26	400	Canon MF3110, MF3228, MF3240, MF5630, MF5650, MF5730, MF5750, MF5770, LBP-3200	
Canon EP-27	400	Canon MF3110, MF3228, MF3240, MF5630, MF5650, MF5730, MF5750, MF5770, LBP-3200	
Canon EP-32	600	Canon LBP-1000, LBP-1310	
Canon EP-52	700	Canon LBP-1760	
Canon FX-3	400	Canon MultiPASS L60, L90, FAX-L200, L220, L240, L250, L280, FAX-L290, L295, L300, L350, L360	
Canon FX-10	400	Canon FAX-L100, L120, L140, L160, MF4018, MF4120, MF4140, MF4150, MF4270, MF4320, MF4330, MF4340, MF4350, MF4370, MF4380, MF4660, MF4690	
Canon E16	400	Canon FC-100, FC-108, FC-120, FC-128, FC-200, FC-204, FC-206, FC-208, FC-210, FC-220, FC-224, FC-226, FC-228, FC-230, FC-290, FC-330, FC-336, FC-530, PC-740, PC-750, PC-760, PC-770, PC-780, PC-860, PC-880, PC-890	
Canon E30	400	Canon FC-100, FC-108, FC-120, FC-128, FC-200, FC-204, FC-206, FC-208, FC-210, FC-220, FC-224, FC-226, FC-228, FC-230, FC-290, FC-330, FC-336, FC-530, PC-740, PC-750, PC-760, PC-770, PC-780, PC-860, PC-880, PC-890	

Цветные			
Canon 701 black	1500	Canon LBP-5200, MF8180C	чип
Canon 701 cyan	1500	Canon LBP-5200, MF8180C	чип
Canon 701 yellow	1500	Canon LBP-5200, MF8180C	чип
Canon 701 magenta	1500	Canon LBP-5200, MF8180C	чип
Canon 711 black	1800	Canon LBP-5300, LBP-5360, MF9130, MF9170, MF9220, MF9280	чип
Canon 711 cyan	1800	Canon LBP-5300, LBP-5360, MF9130, MF9170, MF9220, MF9280	чип
Canon 711 yellow	1800	Canon LBP-5300, LBP-5360, MF9130, MF9170, MF9220, MF9280	чип
Canon 711 magenta	1800	Canon LBP-5300, LBP-5360, MF9130, MF9170, MF9220, MF9280	чип
Canon 716 black	900	Canon LBP-5050, MF8030C, MF8040C, MF8050C, MF8080C	чип
Canon 716 cyan	900	Canon LBP-5050, MF8030C, MF8040C, MF8050C, MF8080C	чип
Canon 716 yellow	900	Canon LBP-5050, MF8030C, MF8040C, MF8050C, MF8080C	чип
Canon 716 magenta	900	Canon LBP-5050, MF8030C, MF8040C, MF8050C, MF8080C	чип
Canon 718 black	900	Canon LBP-7200, LBP-7210, LBP-7660, LBP-7680, MF8330, MF8340, MF8350, MF8360, MF8380, MF8540, MF8550, MF8580	чип
Canon 718 cyan	900	Canon LBP-7200, LBP-7210, LBP-7660, LBP-7680, MF8330, MF8340, MF8350, MF8360, MF8380, MF8540, MF8550, MF8580	чип
Canon 718 yellow	900	Canon LBP-7200, LBP-7210, LBP-7660, LBP-7680, MF8330, MF8340, MF8350, MF8360, MF8380, MF8540, MF8550, MF8580	чип
Canon 718 magenta	900	Canon LBP-7200, LBP-7210, LBP-7660, LBP-7680, MF8330, MF8340, MF8350, MF8360, MF8380, MF8540, MF8550, MF8580	чип
Canon 729 black	900	Canon LBP-7010c, LBP-7018c	чип
Canon 729 cyan	900	Canon LBP-7010c, LBP-7018c	чип
Canon 729 yellow	900	Canon LBP-7010c, LBP-7018c	чип
Canon 729 magenta	900	Canon LBP-7010c, LBP-7018c	чип
Canon 731 black	900	Canon LBP-7100c, LBP-7100cn, LBP-7110c, MF8230Cn, MF8280Cw, MF623Cn, MF628Cw	чип
Canon 731H black	900	Canon LBP-7100c, LBP-7100cn, LBP-7110c, MF8230Cn, MF8280Cw, MF623Cn, MF628Cw	чип
Canon 731 cyan	900	Canon LBP-7100c, LBP-7100cn, LBP-7110c, MF8230Cn, MF8280Cw, MF623Cn, MF628Cw	чип
Canon 731 yellow	900	Canon LBP-7100c, LBP-7100cn, LBP-7110c, MF8230Cn, MF8280Cw, MF623Cn, MF628Cw	чип
Canon 731 magenta	900	Canon LBP-7100c, LBP-7100cn, LBP-7110c, MF8230Cn, MF8280Cw, MF623Cn, MF628Cw	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Кюосера ТК-17	800	Кюосера FS-1000, FS-1010, FS-1050	
Кюосера ТК-18	800	Кюосера FS-1020, FS-1018MFP, FS-1118MFP	
Кюосера ТК-100	800	Кюосера KM-1500	
Кюосера ТК-110	800	Кюосера FS-720, FS-820, FS-920, FS-1016MFP, FS-1116MFP	
Кюосера ТК-120	800	Кюосера FS-1030D, FS-1030dn	
Кюосера ТК-130	800	Кюосера FS-1028MFP, FS-1128MFP, FS-1300, FS-1350	
Кюосера ТК-140	800	Кюосера FS-1100	
Кюосера ТК-160	800	Кюосера FS-1120D, P2035D	
Кюосера ТК-170	800	Кюосера FS-1320D, FS-1370dn, P2135D, P2135dn	
Кюосера ТК-340	1600	Кюосера FS-2020D, FS-2020dn	чип
Кюосера ТК-350	1400	Кюосера FS-3920, FS-3040MFP, FS-3140MFP, FS-3540MFP, 3640MFP	чип
Кюосера ТК-360	1400	Кюосера FS-4020	чип
Кюосера ТК-410	1600	Кюосера KM-1620, KM-1635, KM-1650, KM-2020, KM-2035, KM-2050	
Кюосера ТК-420	1600	Кюосера KM-2550	
Кюосера ТК-435	1600	Кюосера TASKalfa 180, 181, 220, 221	
Кюосера ТК-450	1700	Кюосера FS-6970dn	чип
Кюосера ТК-475	1700	Кюосера FS-6025MFP, FS-6030MFP, FS-6525MFP, FS-6530MFP	чип
Кюосера ТК-5140K	1900	Кюосера M6030cdn, M6530cdn, P6130cdn	чип
Кюосера ТК-5140C	1900	Кюосера M6030cdn, M6530cdn, P6130cdn	чип
Кюосера ТК-5140Y	1900	Кюосера M6030cdn, M6530cdn, P6130cdn	чип
Кюосера ТК-5140M	1900	Кюосера M6030cdn, M6530cdn, P6130cdn	чип
Кюосера ТК-5150K	1900	Кюосера ECOSYS M6035cidn, M6535cidn, P6035cdn	чип
Кюосера ТК-5150C	1900	Кюосера ECOSYS M6035cidn, M6535cidn, P6035cdn	чип
Кюосера ТК-5150Y	1900	Кюосера ECOSYS M6035cidn, M6535cidn, P6035cdn	чип
Кюосера ТК-5150M	1900	Кюосера ECOSYS M6035cidn, M6535cidn, P6035cdn	чип
Кюосера ТК-5220K	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5220C	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5220Y	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5220M	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5230K	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5230C	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5230Y	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5230M	1800	Кюосера ECOSYS P5021cdn, P5021cdw, M5521cdn, M5521cdw	чип
Кюосера ТК-5240K	2500	Кюосера ECOSYS P5026cdn, P5026cdw, M5526cdn, M5526cdw	чип
Кюосера ТК-5240C	2500	Кюосера ECOSYS P5026cdn, P5026cdw, M5526cdn, M5526cdw	чип

Kyocera TK-5240Y	2500	Kyocera ECOSYS P5026cdn, P5026cdw, M5526cdn, M5526cdw	чип
Kyocera TK-5240M	2500	Kyocera ECOSYS P5026cdn, P5026cdw, M5526cdn, M5526cdw	чип
Kyocera TK-580K	1500	Kyocera FS-C5150dn, P6021cdn	чип
Kyocera TK-580C	1500	Kyocera FS-C5150dn, P6021cdn	чип
Kyocera TK-580Y	1500	Kyocera FS-C5150dn, P6021cdn	чип
Kyocera TK-580M	1500	Kyocera FS-C5150dn, P6021cdn	чип
Kyocera TK-590K	1800	Kyocera FS-C2026MFP, FS-C2126MFP, FS-C2526MFP, FS-C2626MFP, FS-C5250dn, P6026cdn, M6026cdn, M6526cdn	чип
Kyocera TK-590C	1800	Kyocera FS-C2026MFP, FS-C2126MFP, FS-C2526MFP, FS-C2626MFP, FS-C5250dn, P6026cdn, M6026cdn, M6526cdn	чип
Kyocera TK-590Y	1800	Kyocera FS-C2026MFP, FS-C2126MFP, FS-C2526MFP, FS-C2626MFP, FS-C5250dn, P6026cdn, M6026cdn, M6526cdn	чип
Kyocera TK-590M	1800	Kyocera FS-C2026MFP, FS-C2126MFP, FS-C2526MFP, FS-C2626MFP, FS-C5250dn, P6026cdn, M6026cdn, M6526cdn	чип
Kyocera TK-895K	2500	Kyocera FS-C8020MFP, FS-C8025MFP, FS-C8520MFP, FS-C8525MFP	чип
Kyocera TK-895C	2000	Kyocera FS-C8020MFP, FS-C8025MFP, FS-C8520MFP, FS-C8525MFP	чип
Kyocera TK-895Y	2000	Kyocera FS-C8020MFP, FS-C8025MFP, FS-C8520MFP, FS-C8525MFP	чип
Kyocera TK-895M	2000	Kyocera FS-C8020MFP, FS-C8025MFP, FS-C8520MFP, FS-C8525MFP	чип
Kyocera TK-1100	900	Kyocera FS-1110, FS-1024MFP, FS-1124MFP	
Kyocera TK-1110	700	Kyocera FS-1040, FS-1020MFP, FS-1120MFP	чип
Kyocera TK-1120	700	Kyocera FS-1060dn, FS-1025MFP, FS-1125MFP	чип
Kyocera TK-1130	800	Kyocera FS-1030MFP, FS-1130MFP, M2030dn, M2530dn	чип
Kyocera TK-1140	800	Kyocera FS-1035MFP, FS-1135MFP, M2035dn, M2535dn	чип
Kyocera TK-1150	900	Kyocera ECOSYS P2235dn, P2235dw, M2135dn, M2635dn, M2735dw	ин.
Kyocera TK-1160	1000	Kyocera ECOSYS P2040dn, P2040dw	ин.
Kyocera TK-1170	1000	Kyocera ECOSYS M2040dn, M2540dn, M2640idw	ин.
Kyocera TK-3100	1500	Kyocera FS-2100d, FS-2100dn, M3040dn, M3540dn	чип
Kyocera TK-3110	1700	Kyocera FS-4100dn	чип
Kyocera TK-3130	1900	Kyocera FS-4200dn, FS-4300dn, M3550idn, M3560idn	чип
Kyocera TK-3150	1500	Kyocera M3040idn, M3540idn	чип
Kyocera TK-3160	1200	Kyocera ECOSYS P3045dn, P3050dn, P3055dn, P3060dn	ин.
Kyocera TK-3170	1400	Kyocera ECOSYS P3050dn, P3055dn, P3060dn	ин.
Kyocera TK-3190	1600	Kyocera ECOSYS P3055dn, P3060dn	ин.
Kyocera TK-4105	1500	Kyocera TASKalfa 1800, 1801, 2200, 2201	чип
Kyocera TK-6115	1600	Kyocera ECOSYS M4125idn, M4132idn	ин.

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Монохромные			
Samsung ML-1210D3	500	Samsung ML-1010, ML-1020, ML-1210, ML-1220, ML-1250, ML-1430	
Samsung ML-1520D3	500	Samsung ML-1515, ML-1520	
Samsung ML-1610D2	500	Samsung ML-1610, ML-1615	
Samsung ML-D1630A	700	Samsung ML-1630, ML-1631, SCX-4500	чип
Samsung ML-1710D3	500	Samsung ML-1510, ML-1710, ML-1740, ML-1750, ML-1755	
Samsung ML-2010D3	500	Samsung ML-2010, ML-2015, ML-2510, ML-2570, ML-2571	
Samsung ML-2150D8	800	Samsung ML-2150, ML-2151, ML-2152	чип
Samsung ML-2250D5	800	Samsung ML-2250, ML-2251, ML-2252	
Samsung ML-2550DA	800	Samsung ML-2550, ML-2551, ML-2552	чип
Samsung ML-D2850A	800	Samsung ML-2850, ML-2851	чип
Samsung ML-D2850B	800	Samsung ML-2850, ML-2851	чип
Samsung ML-D3050A	800	Samsung ML-3050, ML-3051	чип
Samsung ML-D3050B	800	Samsung ML-3050, ML-3051	чип
Samsung ML-D3470A	800	Samsung ML-3470, ML-3471	чип
Samsung ML-D3470B	800	Samsung ML-3470, ML-3471	чип
Samsung ML-D4550A	900	Samsung ML-4050, ML-4550, ML-4551	чип
Samsung ML-D4550B	900	Samsung ML-4050, ML-4550, ML-4551	чип
Samsung MLT-D101S	1000	Samsung ML-2160, ML-2165, ML-2167, ML-2168, SCX-3400, SCX-3405, SCX-3407	чип
Samsung MLT-D103S	600	Samsung ML-2950, ML-2955, SCX-4705, SCX-4727, SCX-4728, SCX-4729	чип

Samsung MLT-D104S	700	Samsung ML-1660, ML-1665, ML-1667, ML-1670, ML-1671, ML-1675, ML-1676, ML-1677, ML-1860, ML-1865, ML-1867, SCX-3200, SCX-3205, SCX-3207, SCX-3217	чип
Samsung MLT-D105S	600	Samsung ML-1910, ML-1915, ML-2520, ML-2525, ML-2540, ML-2580, SCX-4600, SCX-4623, SF-650	чип
Samsung MLT-D106S	600	Samsung ML-2245	чип
Samsung MLT-D108S	600	Samsung ML-1640, ML-1641, ML-1645, ML-2240, ML-2241	чип
Samsung MLT-D109S	600	Samsung SCX-4300	чип
Samsung MLT-D111S	1100	Samsung Xpress M2020, M2022, M2070	чип
Samsung MLT-D115L	900	Samsung Xpress M2620, M2670, M2820, M2870, M2830DW, M2880FW	чип
Samsung MLT-D117S	700	Samsung SCX-4650, SCX-4655	чип
Samsung MLT-D119S	500	Samsung ML-1610, ML-1615, ML-2010, ML-2015, ML-2510, ML-2570, ML-2571, SCX-4321, SCX-4521	
Samsung MLT-D203S	1200	Samsung SL-M3320, SL-M3820, SL-M4020, SL-M3370, SL-M3870, SL-M4070	чип
Samsung MLT-D205S	600	Samsung ML-3310, ML-3710, SCX-4833, SCX-5637, SCX-5737	чип
Samsung MLT-D208S	600	Samsung SCX-5635FN, SCX-5835FN	чип
Samsung MLT-D209S	600	Samsung SCX-4824, SCX-4828, ML-2855	чип
Samsung SCX-4100D3	500	Samsung SCX-4100, SCX-4150	
Samsung SCX-D4200A	500	Samsung SCX-4200, SCX-4220	чип
Samsung SCX-D4725A	600	Samsung SCX-4725	чип
Samsung SCX-D5530A	800	Samsung SCX-5330, SCX-5530	чип
Samsung SCX-4216D3	500	Samsung SCX-4016, SCX-4216, SF-560, SF-565	
Samsung SCX-4521D3	500	Samsung SCX-4521, SCX-4321	

Samsung SCX-4720D3	600	Samsung SCX-4520, SCX-4720	чип
Samsung SCX-6320D8	800	Samsung SCX-6122, SCX-6220, SCX-6320, SCX-6322, SCX-6520	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Xerox 006R01278	800	Xerox WorkCentre 4118	чип
Xerox 013R00606	800	Xerox WorkCentre PE120	чип
Xerox 013R00607	500	Xerox WorkCentre PE114e	
Xerox 013R00621	500	Xerox WorkCentre PE220	чип
Xerox 013R00625	500	Xerox WorkCentre 3119	чип
Xerox 101R00474	1000	Xerox Phaser 3052, 3260, WorkCentre 3215, 3225 Drum Cartridge	чип
Xerox 106R00586	800	Xerox WorkCentre M15, 312, Pro 412	
Xerox 106R01033	800	Xerox Phaser 3420, 3425	чип
Xerox 106R01034	800	Xerox Phaser 3420, 3425	чип
Xerox 106R01048	800	Xerox WorkCentre M20, CopyCentre C20	чип
Xerox 106R01159	500	Xerox Phaser 3117, 3122, 3124, 3125	
Xerox 106R01245	800	Xerox Phaser 3428	чип
Xerox 106R01335 c	600	Xerox Phaser 6125	чип
Xerox 106R01336 m	600	Xerox Phaser 6125	чип
Xerox 106R01337 y	600	Xerox Phaser 6125	чип
Xerox 106R01338 bk	600	Xerox Phaser 6125	чип
Xerox 106R01373	600	Xerox Phaser 3250	чип
Xerox 106R01378	1100	Xerox Phaser 3100MFP	с/к
Xerox 106R01411	800	Xerox Phaser 3300MFP	чип
Xerox 106R01414	800	Xerox Phaser 3435	чип
Xerox 106R01463 c	1200	Xerox Phaser 6121MFP	чип
Xerox 106R01464 m	1200	Xerox Phaser 6121MFP	чип
Xerox 106R01465 y	1200	Xerox Phaser 6121MFP	чип
Xerox 106R01473 c	1200	Xerox Phaser 6121MFP	чип
Xerox 106R01474 m	1200	Xerox Phaser 6121MFP	чип
Xerox 106R01475 y	1200	Xerox Phaser 6121MFP	чип
Xerox 106R01476 bk	1200	Xerox Phaser 6121MFP	чип
Xerox 106R01485	800	Xerox WorkCentre 3210, 3220	чип
Xerox 106R01529	800	Xerox WorkCentre 3550	чип
Xerox 106R01631 c	700	Xerox Phaser 6000, 6010, WorkCentre 6015	чип
Xerox 106R01632 m	700	Xerox Phaser 6000, 6010, WorkCentre 6015	чип
Xerox 106R01633 y	700	Xerox Phaser 6000, 6010, WorkCentre 6015	чип
Xerox 106R01634 bk	700	Xerox Phaser 6000, 6010, WorkCentre 6015	чип
Xerox 106R02181	800	Xerox Phaser 3010, 3040, WorkCentre 3045	чип
Xerox 106R02304	800	Xerox Phaser 3320dn, 3320dni	чип
Xerox 106R02308	1000	Xerox WorkCentre 3315	чип
Xerox 106R02310	1000	Xerox WorkCentre 3315, 3325	чип
Xerox 106R02773	900	Xerox Phaser 3020, WorkCentre 3025	чип
Xerox 106R02778	900	Xerox Phaser 3052, 3260, WorkCentre 3215, 3225	чип
Xerox 106R03048	900	Xerox Phaser 3020, WorkCentre 3025	чип
Xerox 106R03620	1500	Xerox Phaser 3330, WorkCentre 3335, 3345	чип
Xerox 108R00794	800	Xerox Phaser 3635	чип
Xerox 108R00908	700	Xerox Phaser 3140, 3155, 3160	чип
Xerox 109R00639	500	Xerox Phaser 3110, 3210	
Xerox 109R00725	500	Xerox Phaser 3115, 3120, 3121, 3130	
Xerox 109R00746	800	Xerox Phaser 3150	чип
Xerox 109R00748	500	Xerox Phaser 3116	

Xerox 113R00667	500	Xerox WorkCentre PE16	
Xerox 113R00730	700	Xerox Phaser 3200MFP	чип
Xerox 650N05407	900	Xerox Phaser 3020, WorkCentre 3025	чип
Xerox 650N05408	900	Xerox Phaser 3052, 3260, WorkCentre 3215, 3225	чип
Xerox 650N05434	1500	Xerox Phaser 3330, WorkCentre 3335, 3345	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Sharp AL-100TD	600	Sharp AL-1000, AL-1010, AL-1020, AL-1041, AL-1200, AL-1220, AL-1250, AL-1500	
Sharp AL-110DC	600	Sharp AL-1043, AL-1045, AL-1217, AL-1252, AL-1255, AL-1452, AL-1456, AL-1457, AL-1551, AL-1555, AL-1566	
Sharp AR-015T AR016T	1500	Sharp AR-5316, AR-5320, AR-5015, AR-5120	чип
Sharp AR-020T	1500	Sharp AR-5516, AR-5520	чип
Sharp AR-202T	1500	Sharp AR-M160, AR-M205	чип
Sharp AR-152T	800	Sharp AR-122, AR-153, AR-5012, AR-5415, AR-M150, AR-M155	чип
Sharp AR-168T	800	Sharp AR-122, AR-153, AR-5012, AR-5415, AR-M150, AR-M155	чип
Sharp AR-208T	1000	Sharp AR-5420, AR-203, AR-M201	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Brother TN-1075	500	Brother HL-1110R, HL-1112R, HL-1210WR, HL-1212WR, DCP-1510R, DCP-1512R, DCP-1610WR, DCP-1612WR, MFC-1810R, MFC-1815R, MFC-1912WR	φ
Brother TN-2075	500	Brother HL-2030, HL-2040, HL-2070, FAX-2825, FAX-2920, DCP-7010, DCP-7025, MFC-7420, MFC-7820	φ
Brother TN-2080	500	Brother HL-2130, DCP-7055	φ
Brother TN-2085	500	Brother HL-2035	φ
Brother TN-2090	500	Brother HL-2132R, DCP-7057	φ
Brother TN-2135	500	Brother HL-2140R, HL-2142, HL-2150, HL-2170, DCP-7030, DCP-7032, DCP-7040, DCP-7045, MFC-7320, MFC-7440, MFC-7840	φ
Brother TN-2175	500	Brother HL-2140R, HL-2142, HL-2150, HL-2170, DCP-7030, DCP-7032, DCP-7040, DCP-7045, MFC-7320, MFC-7440, MFC-7840	φ
Brother TN-2235	500	Brother HL-2240, HL-2250, DCP-7060, DCP-7065, DCP-7070, MFC-7360, MFC-7860	φ
Brother TN-2275	500	Brother HL-2240, HL-2250, DCP-7060, DCP-7065, DCP-7070, MFC-7360, MFC-7860	φ
Brother TN-2335	500	Brother HL-L2300DR, HL-L2340DWR, HL-L2360DNR, HL-L2365DWR, DCP-L2500DR, DCP-L2520DWR, DCP-L2540DNR, DCP-L2560DWR, MFC-L2700DWR, MFC-L2720DWR, MFC-L2740DWR	φ
Brother TN-2375	500	Brother HL-L2300DR HL-L2340DWR, HL-L2360DNR, HL-L2365DWR, DCP-L2500DR, DCP-L2520DWR, DCP-L2540DNR, DCP-L2560DWR, MFC-L2700DWR, MFC-L2720DWR, MFC-L2740DWR	φ
Brother TN-3030	800	Brother HL-5130, HL-5140, HL-5150, HL-5170, DCP-8040, DCP-8045, MFC-8220, MFC-8440, MFC-8840	
Brother TN-3060	800	Brother HL-5130, HL-5140, HL-5150, HL-5170, DCP-8040, DCP-8045, MFC-8220, MFC-8440, MFC-8840	
Brother TN-3130	800	Brother HL-5240, HL-5250, HL-5270, HL-5280, MFC-8460, MFC-8860, MFC-8870, DCP-8060, DCP-8065	φ
Brother TN-3170	800	Brother HL-5240, HL-5250, HL-5270, HL-5280, MFC-8460, MFC-8860, MFC-8870, DCP-8060, DCP-8065	φ
Brother TN-3230	800	Brother HL-5340, HL-5350, HL-5370, HL-5380, DCP-8070, DCP-8085, MFC-8370, MFC-8380, MFC-8880, MFC-8890	φ
Brother TN-3280	800	Brother HL-5340, HL-5350, HL-5370, HL-5380, DCP-8070, DCP-8085, MFC-8370, MFC-8380, MFC-8880, MFC-8890	φ
Brother TN-3330	800	Brother HL-5440D, HL-5450DN, HL-5470DW, HL-6180DW, DCP-8110DN, DCP-8250DN, MFC-8520DN, MFC-8950DW	φ
Brother TN-3380	800	Brother HL-5440D, HL-5450DN, HL-5470DW, HL-6180DW, DCP-8110DN, DCP-8250DN, MFC-8520DN, MFC-8950DW	φ
Brother TN-3390	800	Brother HL-6180DW, DCP-8250DN, MFC-8950DW	φ
Brother TN-3430	800	Brother HL-L5000D, HL-L5100DN, HL-L5100DNT, HL-L5200DW, HL-L5200DWT, HL-L6250DN, HL-L6300DW, HL-L6300DWT, HL-L6400DW, HL-L6400DWT, DCP-L5500DN, DCP-L6600DW, MFC-L5700DN, MFC-L5750DW, MFC-L6800DW, MFC-L6800DWT, MFC-L6900DW	φ
Brother TN-3480	800	Brother HL-L5000D, HL-L5100DN, HL-L5100DNT, HL-L5200DW, HL-L5200DWT, HL-L6250DN, HL-L6300DW, HL-L6300DWT, HL-L6400DW, HL-L6400DWT, DCP-L5500DN, DCP-L6600DW, MFC-L5700DN, MFC-L5750DW, MFC-L6800DW, MFC-L6800DWT, MFC-L6900DW	φ

Brother TN-3512	1200	Brother HL-L6250DN, HL-L6300DW, HL-L6300DWT, HL-L6400DW, HL-L6400DWT, DCP-L6600DW, MFC-L6800DW, MFC-L6800DWT, MFC-L6900DW	φ
Brother TN-3520	1800	Brother HL-L6400DW, HL-L6400DWT, MFC-L6900DW	φ
Brother TN-6300	800	Brother HL-1030, HL-1230, HL-1240, HL-1250, HL-1270, HL-1430, HL-1440, HL-1450, HL-1470, HL-P2500, FAX-4750, FAX-5750, MFC-8350, MFC-8360, MFC-8750, MFC-9600, MFC-9650, MFC-9660, MFC-9750, MFC-9760, MFC-9850, MFC-9860, MFC-9870, MFC-9880	
Brother TN-6600	800	Brother HL-1030, HL-1230, HL-1240, HL-1250, HL-1270, HL-1430, HL-1440, HL-1450, HL-1470, HL-P2500, FAX-4750, FAX-5750, MFC-8350, MFC-8360, MFC-8750, MFC-9600, MFC-9650, MFC-9660, MFC-9750, MFC-9760, MFC-9850, MFC-9860, MFC-9870, MFC-9880	
Brother TN-7300	800	Brother HL-1260, HL-1650, HL-1670, HL-1850, HL-1870, HL-5030, HL-5040, HL-5050, HL-5070, MFC-8420, MFC-8820, DCP-8020, DCP-8025	
Brother TN-7600	800	Brother HL-1260, HL-1650, HL-1670, HL-1850, HL-1870, HL-5030, HL-5040, HL-5050, HL-5070, MFC-8420, MFC-8820, DCP-8020, DCP-8025	

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Panasonic KX-FAT400A7	800	Panasonic KX-MB1500, KX-MB1507, KX-MB1520, KX-MB1530, KX-MB1536	чип
Panasonic KX-FAT411A7	600	Panasonic KX-MB1900, KX-MB2000, KX-MB2020, KX-MB2030, KX-MB2051, KX-MB2061	

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Ricoh SP 110E	500	Ricoh SP 111, 111SU, 111SF	
Ricoh SP 150LE	800	Ricoh SP 150, 150w, 150SU, 150SUw	чип
Ricoh SP 200LE	800	Ricoh SP 200N, 200NW, 200S, 202SN, 210, 210SF, 210SU, 212W, 212NW, 212SFW, 212SUW, 212SFNW	чип
Ricoh SP 200HE	800	Ricoh SP 200N, 200NW, 200S, 202SN, 210, 210SF, 210SU, 212W, 212NW, 212SFW, 212SUW, 212SFNW	чип
Ricoh SP 300	800	Ricoh SP 300DN	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Pantum PC-110 / PA-110	1000	Pantum P1000, P1050, P2000, P2010, P2050, M5000, M5005, M6000, M6005	чип
Pantum PC-100 / PA-100	1000	Pantum P1000, P1050, P2000, P2010, P2050, M5000, M5005, M6000, M6005	чип
Pantum PC-110H / PA-110H	1000	Pantum P1000, P1050, P2000, P2010, P2050, M5000, M5005, M6000, M6005	чип
Pantum P-110 / P-110H	1000	Pantum P1000, P1050, P2000, P2010, P2050, M5000, M5005, M6000, M6005	чип
Pantum PC-110E	1000	Pantum P1000, P1050, P2000, P2010, P2050, M5000, M5005, M6000, M6005	чип
Pantum PC-130	1000	Pantum P1000, P1050, P2000, P2010, P2050, M5000, M5005, M6000, M6005	чип
Pantum P-230R	1000	Pantum P2200, P2207, P2500W, P2507, M6500, M6500N, M6500W, M6500NW, M6550NW, M6557W, M6600N, M6600W, M6600NW, M6607, M6607NW	чип
Pantum PC-230R	1000	Pantum P2200, P2207, P2500W, P2507, M6500, M6500N, M6500W, M6500NW, M6550NW, M6557W, M6600N, M6600W, M6600NW, M6607, M6607NW	чип
Pantum PC-211EV	1000	Pantum P2200, P2207, P2500W, P2507, M6500, M6500N, M6500W, M6500NW, M6550NW, M6557W, M6600N, M6600W, M6600NW, M6607, M6607NW	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Epson S050166	800	Epson EPL-6200	чип
Epson S050167	800	Epson EPL-6200	чип
Epson C13S050435	1000	Epson AcuLaser M2000	
Epson C13S050436	1000	Epson AcuLaser M2000	
Epson C13S050650	600	Epson AcuLaser M1400, MX14	чип
Epson C13S050652	600	Epson AcuLaser M1400, MX14	чип
Epson C13S050614 bk	1000	Epson AcuLaser CX17NF, C1700, C1750N	чип
Epson C13S050613 c	1000	Epson AcuLaser CX17NF, C1700, C1750N	чип
Epson C13S050611 y	1000	Epson AcuLaser CX17NF, C1700, C1750N	чип
Epson C13S050612 m	1000	Epson AcuLaser CX17NF, C1700, C1750N	чип

Модель картриджа	Цена	Модель принтера / МФУ	Прим.
OKI 44574705	1000 1000	OKI B411d, B411dn, B431d, B431dn, MB461dn, MB471dn, MB491dn	чип
OKI 44574805	1000	OKI B431d, B431dn, MB461dn, MB471dn, MB491dn	чип
OKI 44574906	1000	OKI B431d, B431dn	чип
OKI 44917608	1000	OKI B431d, B431dn, MB491dn	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Lexmark 10S0150	800	Lexmark E210	чип
Lexmark 12016SE	800	Lexmark E120, E120n	чип

Модель картриджа	Цена руб.	Модель принтера / МФУ	Прим.
Philips PFA 821	1100	Philips LaserMFD 6020, 6050, 6080	с/к